

Термопара ТЕ-BF (R)

Технические характеристики

По вопросам продаж и поддержки обращайтесь:

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижний Новгород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59


Киргизия +996(312)96-26-47

эл.почта: ugi@nt-rt.ru || сайт: <http://ludwig.nt-rt.ru/>

TE-BF (R)

FLANGED THERMOCOUPLES ACC. TO DIN 43772

FORM 3F, WITH EXCHANGEABLE INSERT

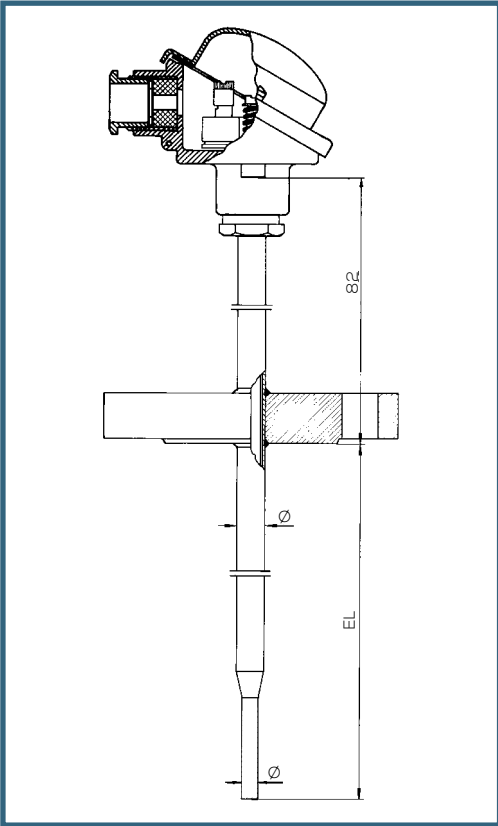

COMPLETE INSTRUMENTS


SPECIFICATION OF THE STANDARD DESIGN:

- + (R) = fast reaction
- + Connection head type B at light metal with cable gland M 20 x 1,5 (acc. to DIN EN 50446)
- + Thermowell and neck tube at stainless steel 1.4571
- + Flange NW25 ND40 form C at stainless steel 1.4571 (acc. to DIN EN 1092)
- + Immersion length EL and thermowell/neck tube $\varnothing$ acc. to table
- + Neck tube length HL = 82mm
- + Measuring tip ca. 50 mm length tapered
- + Measuring insert with mineral insulated sheathed cable (bendable) stainless steel sheath with constant diameter
- + Thermocouple NiCr-Ni (Type K) or Fe-CuNi (Type J); simplex or duplex
- + Tolerance acc. to DIN EN 60584 class 2
- + Measuring point insulated
- + Connection via ceramic terminal block with connection pins
- + Range -100 °C to 600 °C

SPARE INSERTS AT BENDABLE DESIGN

SPECIFICATION:

- + Measuring insert with mineral insulated sheathed cable (bendable) at stainless steel
- + Temperature range -100 °C to 600 °C

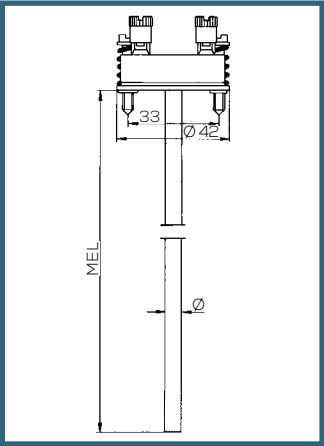

	Insert $\varnothing$ mm	Insert Length in mm	Type K		Type J	
			simplex	duplex	simplex	duplex
TE-ME-MI-6	6	315	8671084	8671184	8671284	8671384
		375	8671085	8671185	8671285	8671385
		435	8671087	8671187	8671287	8671387
TE-ME-MI-8	8	315	8681004	8681104	8681204	8681304
		375	8681005	8681105	8681205	8681305
		435	8681015	8681115	8681215	8681315

Thermowell & Neck Tube ø mm		Material	Immersion Length in mm	Insert ø mm	Insert Length in mm	Type K		Type J		
						simplex	duplex	simplex	duplex	
TE-BF-12 (R)	12 (9)	1.4571 X6CrNiMoTi 17-12-2	225	6	315	8622001	8622101	8622201	8622301	
			285		375	8622002	8622102	8622202	8622302	
			345		435	8622003	8622103	8622203	8622303	
TE-BF-14 (R)	14 (11)		225	8	315	8622011	8622111	8622211	8622311	
			285		375	8622012	8622112	8622212	8622312	
			345		435	8622013	8622113	8622213	8622313	

OPTIONS (Order note on page 4)

Material		Add.-No.
+ Thermowell at stainless steel 1.4541		No. -91
Complete instruments with connection heads (from page 48)		
+ Type BBK	No. -11	+ Type DAN-S No. -14
+ Type BBG	No. -12	+ Type DANH No. -15
+ Type DAN	No. -13	+ Type DANH-S No. -16
Head transmitters (from page 50)		
+ With 45 mm long open wire ends for connection of a head transmitter subsequently		No. -31
+ With head transmitter Type 2 (programmable, elect. insulation)*		No. -33
+ With head transmitter Type 3 (as Type 2, but EEx-Version)*		No. -34

Алматы (727)345-47-04
Ангарск (3955)60-70-56
Архангельск (8182)63-90-72
Астрахань (8512)99-46-04
Барнаул (3852)73-04-60
Белгород (4722)40-23-64
Благовещенск (4162)22-76-07
Брянск (4832)59-03-52
Владивосток (423)249-28-31
Владикавказ (8672)28-90-48
Владимир (4922)49-43-18
Волгоград (844)278-03-48
Вологда (8172)26-41-59
Воронеж (473)204-51-73
Екатеринбург (343)384-55-89

Иваново (4932)77-34-06
Ижевск (3412)26-03-58
Иркутск (395)279-98-46
Казань (843)206-01-48
Калининград (4012)72-03-81
Калуга (4842)92-23-67
Кемерово (3842)65-04-62
Киров (8332)68-02-04
Коломна (4966)23-41-49
Кострома (4942)77-07-48
Краснодар (861)203-40-90
Красноярск (391)204-63-61
Курск (4712)77-13-04
Курган (3522)50-90-47
Липецк (4742)52-20-81

Магнитогорск (3519)55-03-13
Москва (495)268-04-70
Мурманск (8152)59-64-93
Набережные Челны (8552)20-53-41
Нижегород (831)429-08-12
Новокузнецк (3843)20-46-81
Ноябрьск (3496)41-32-12
Новосибирск (383)227-86-73
Омск (3812)21-46-40
Орел (4862)44-53-42
Оренбург (3532)37-68-04
Пенза (8412)22-31-16
Петрозаводск (8142)55-98-37
Псков (8112)59-10-37
Пермь (342)205-81-47

Ростов-на-Дону (863)308-18-15
Рязань (4912)46-61-64
Самара (846)206-03-16
Санкт-Петербург (812)309-46-40
Саратов (845)249-38-78
Севастополь (8692)22-31-93
Саранск (8342)22-96-24
Симферополь (3652)67-13-56
Смоленск (4812)29-41-54
Сочи (862)225-72-31
Ставрополь (8652)20-65-13
Сургут (3462)77-98-35
Сыктывкар (8212)25-95-17
Тамбов (4752)50-40-97
Тверь (4822)63-31-35

Тольятти (8482)63-91-07
Томск (3822)98-41-53
Тула (4872)33-79-87
Тюмень (3452)66-21-18
Ульяновск (8422)24-23-59
Улан-Удэ (3012)59-97-51
Уфа (347)229-48-12
Хабаровск (4212)92-98-04
Чебоксары (8352)28-53-07
Челябинск (351)202-03-61
Череповец (8202)49-02-64
Чита (3022)38-34-83
Якутск (4112)23-90-97
Ярославль (4852)69-52-93

Россия +7(495)268-04-70

Казахстан +(727)345-47-04

Беларусь +(375)257-127-884

Узбекистан +998(71)205-18-59

Киргизия +996(312)96-26-47